

## Fixing Instructions

Included in this pack				
	L	R	Keylock Support	Track Glider
350cm (137")	2	2	12	36
500cm (196")	3	3	18	48

### What the parts do

Part				
Description	<b>Left Hand Track End Cover</b>	<b>Right Hand Track End Cover</b>	<b>Keylock Support</b>	<b>Track Glider</b>
Use	Neatens the cut end of the track and also acts as an end stop.	Neatens the cut end of the track and also acts as an end stop.	Fits to the wall or ceiling and the track then clips onto it before locking in position.	Clips onto the track and allows the curtains to open and close.

## Streamline coiled curtain track instructions

Approximate sizes  
30cm/12" (+/-) 30cm/12" (+/-) 30cm/12" (+/-)

- Mark and fix the supports and equal distance apart in the desired position. Trim track if needed to desired length.
- Make sure the track is the correct way (see diagram of track) and tighten the small screw behind the end stop.  
*Please Note: There is a left and right Track end cover.*
- Ensure the Keylock Supports are in the **unlocked** position.
- Clip the curtain track on to the keylock supports and lock by pushing the toggle to the horizontal position.
- Hook Gliders through curtain tape and fasten on to the track by hooking over the top of the track (A) before clipping underneath (B) to secure.
- Hook the curtain over the End stop to create a tidy finish and secure the curtains in place.

### How to Bend

Gently bend the track to desired shape.  
Practical Tip: Use your knee to ease the bending process and generate a smooth bend.

### Connector - sold as an accessory

### How to Join

Slide second piece of track into position and lock in place.

**PLEASE NOTE:** A support should not be placed at the join. Tracks should be joined at the centre of the window using the factory cut ends, and trimmed equally at the outer ends.