




Fixing Instructions

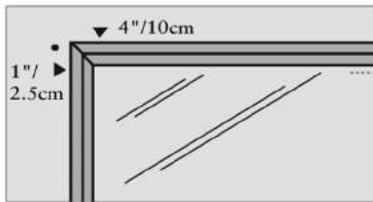


Mark positions for fixing brackets on wall. Ideally these should be located at least 4"/10cm above the top of the window recess, and a minimum of 1"/2.5cm from the side of the recess. For plaster walls and heavy curtains a wooden batten should be used.

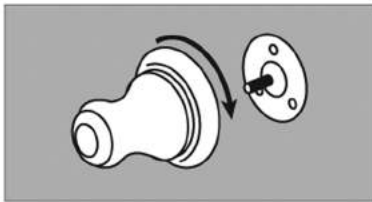

Fix metal wall plates to the wall, using large screws and wall plugs provided.
Then screw support bases onto wall plates

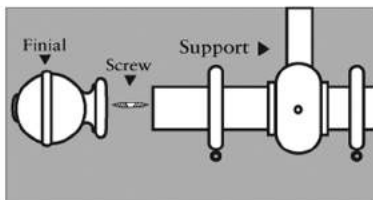


Assemble the pole as shown, using the double threaded screw provided, screw finial into place.
If the pole is cut down to size, carefully mark the centre using the template below and drill a small hole where the end finial is to be screwed in.
One ring should be placed between the end finial and the support. This will act as an end stop.

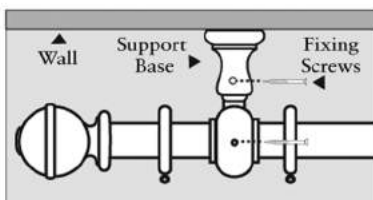


Push the supports into the support bases, securing the fixing screws as shown.

Longer pole lengths can be achieved on 240/300/400cm poles by joining 2 poles using a joining bar.

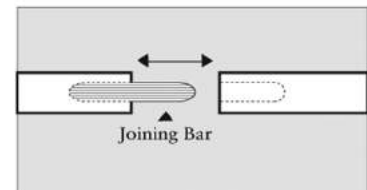

Insert the joining bar into the pre-drilled holes in the end of the two poles and push together firmly.
When cutting a pole in two pieces, cut an equal amount from each pole.

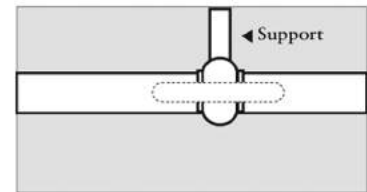

A further support bracket should be fixed to the wall at the point where the joint is made.
To maintain easy opening and closing, we recommend regular use of furniture polish on the pole (not the rings).

For plaster walls and heavy curtains a wooden batten should be used.

NOTE: *Component parts may vary in style*

PLEASE NOTE: *Wood is a natural product and finish may vary in appearance.*

